


One DVC Subwoofer Wired in Series

Two 1-ohm voice coils combine to create a 2-ohm amplifier load.

2Ω

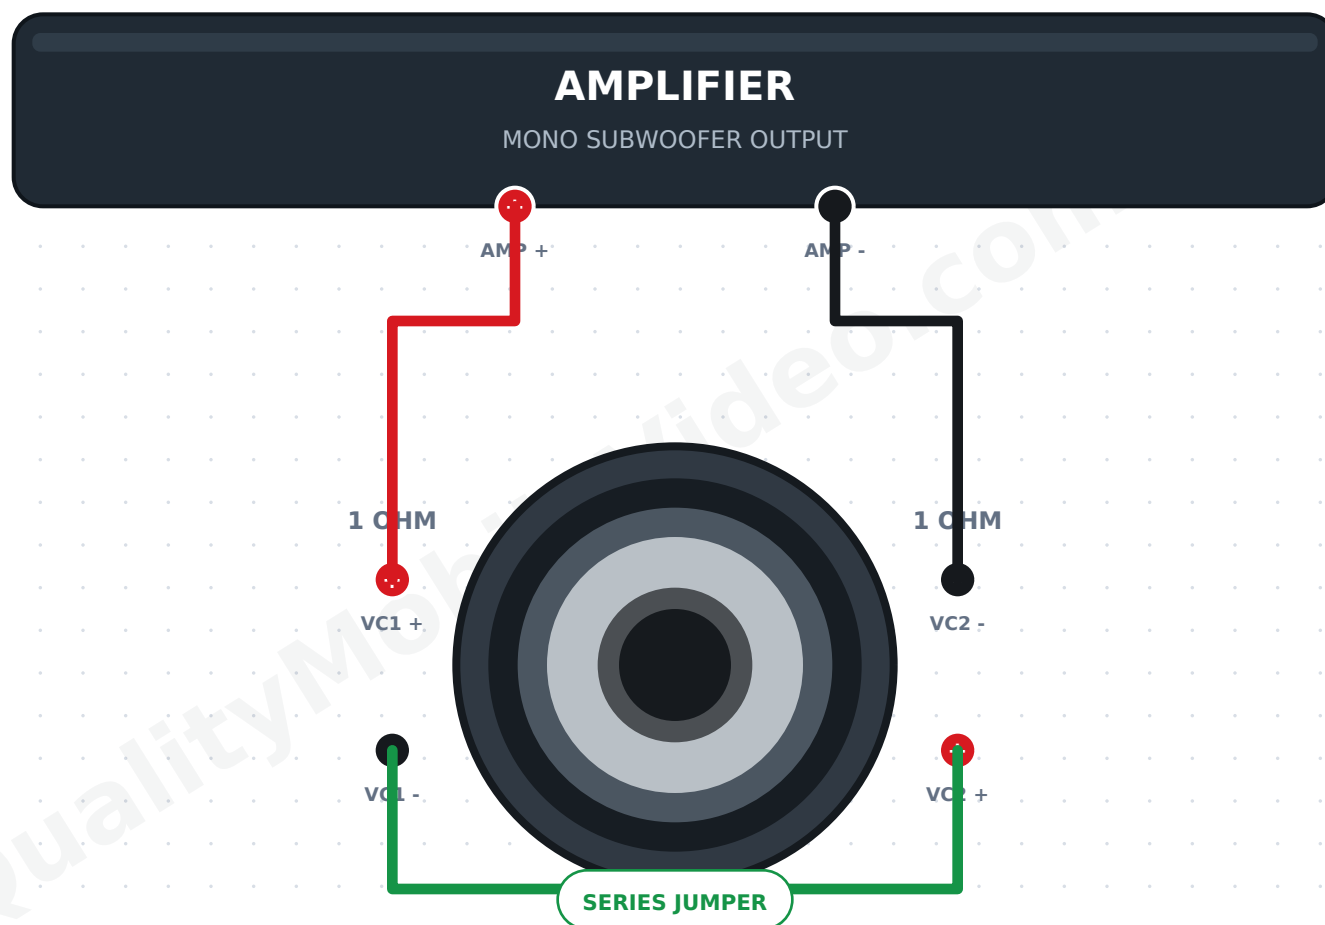

FINAL AMPLIFIER LOAD

2 OHMS

$$1\ \Omega + 1\ \Omega = 2\ \Omega$$

Verify that the amplifier supports a 2-ohm load before making connections.