


Two DVC Subwoofers Wired in Parallel

Four 2-ohm voice coils combine to create a 0.5-ohm load.

0.5Ω

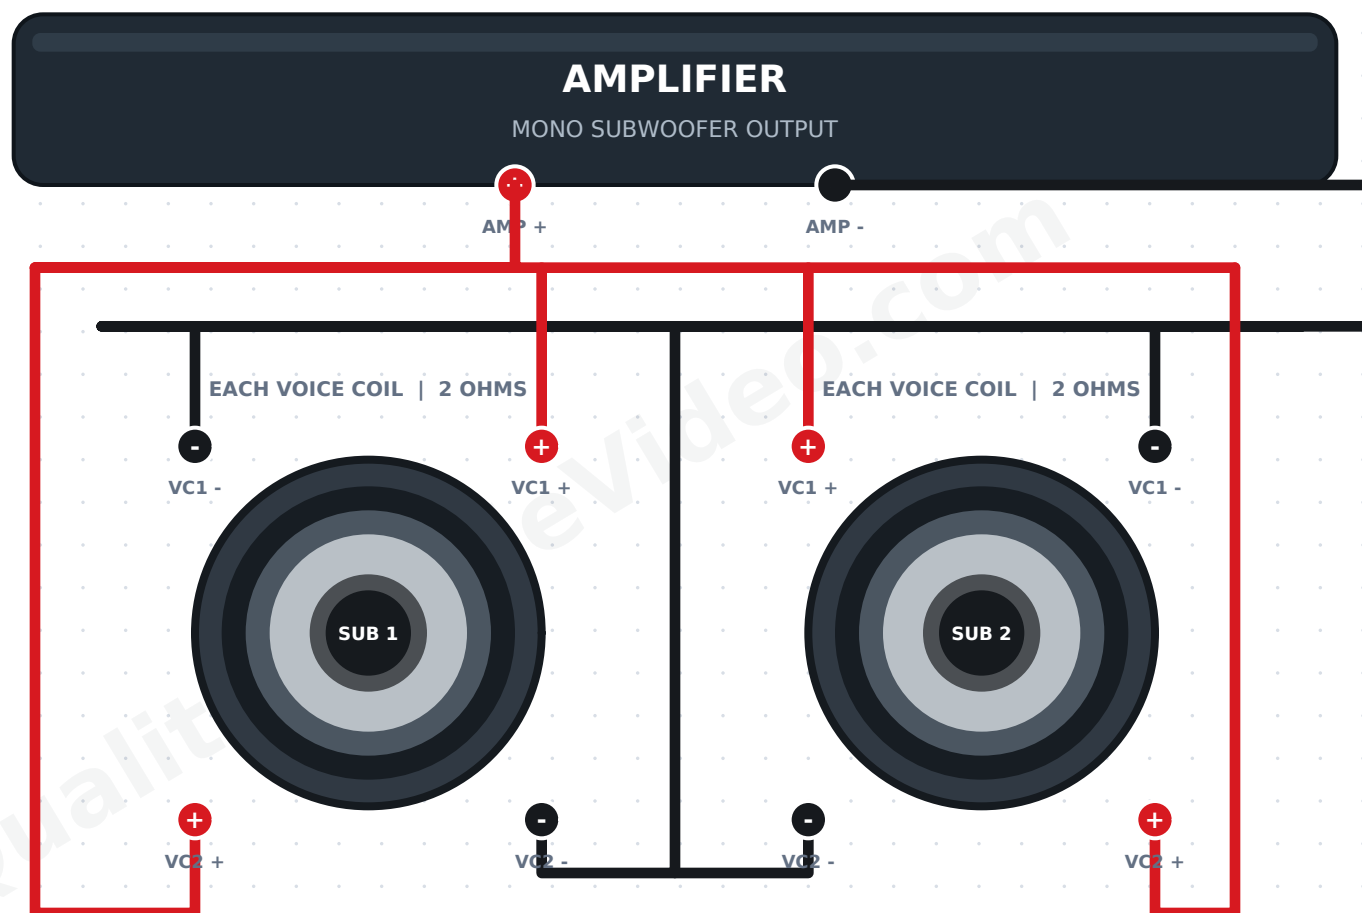

FINAL AMPLIFIER LOAD

0.5 OHMS

FOUR 2-OHM COILS IN PARALLEL = 0.5 OHMS

Verify that the amplifier is stable at 0.5 ohms before making connections.