


Two DVC Subwoofers Wired in Parallel

Four 4-ohm voice coils combine to create an 1-ohm load.

1Ω

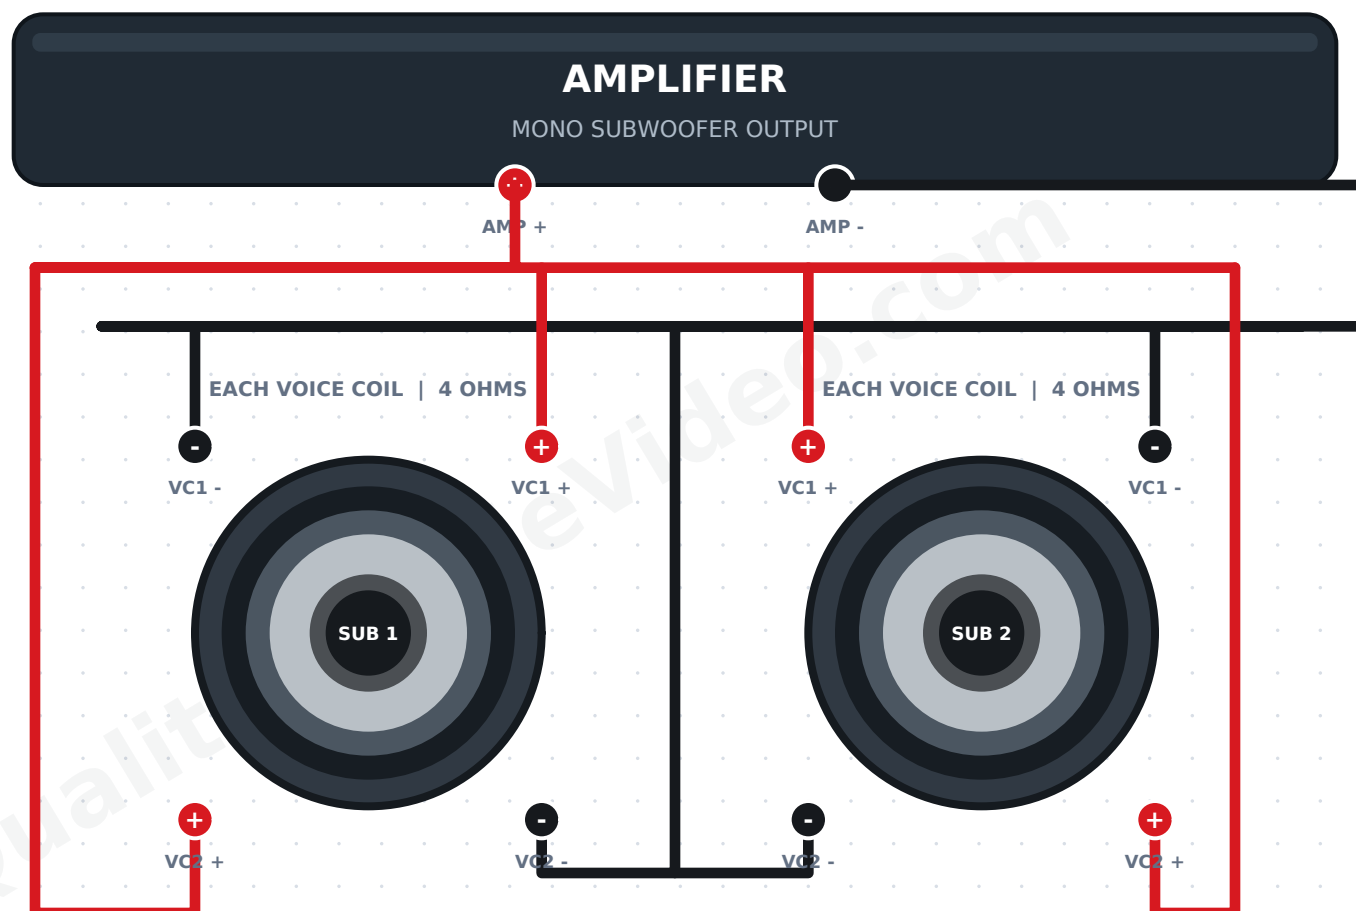

FINAL AMPLIFIER LOAD

1 OHMS

FOUR 4-OHM COILS IN PARALLEL = 1 OHMS

Verify that the amplifier is stable at 1 ohms before making connections.